






 
 


























 









 

 





 






 
 
 
 




Picture	Part name	Code MRP /	Version	Suitable for	Remarks
	Vent Weight	A00-20	1995	1.5 L	Use with Vent Tube with Nut & Washer A00-18.
	Vent Weight	B10-20	1975, 1995	2 L to 12 L	Use with Vent Tube with Nut & Washer B10-18, B11-18 or D10-18.
	Pressure Regulator (Whistling)	H10-20	2005	1.5 L to 12 L	Use with Vent Tube with Nut & Washer H10-18 or H80-18.
	Vent Tube with Nut & Washer	A00-18	1995	1.5 L	Use with Vent Weight A00-20 and Handle Bar A00-12 or its subassembly A0512
	Vent Tube with Nut & Washer	B10-18	1975	2 L to 8 L	Use with Vent Weight B10-20 and Handle Bar A10-12 / B10-12 or their respective subassemblies A15-12/
	Vent Tube with Nut & Washer	B11-18	1995	2 L to 8 L	Use with Vent Weight B10-20 and Handle Bar A11-12 / B11-12 or their respective subassemblies A19-12/
	Vent Tube with Nut & Washer	B20-18	1975, 1995	1.5 L to 8 L	Use with Vent Weight B20-20 and Handle Bar A00-12 / A11-12 B11-12 or their subassemblies A05-12/A19-1
	Vent Tube with Nut & Washer	D10-18	1975, 1995	8 L Jumbo & 10L	Use with Vent Weight B10-20 and Handle Bar D10-12 or its subassembly D15-12.
	Vent Tube with Nut & Washer	D20-18	1975, 1995	8 L Jumbo & 10L	Use with Vent Weight B20-20 and Handle Bar D10-12 or its subassembly D15-12.
	Vent Tube with Nut & Washer	H10-18	2005	1.5 L to 8 L	Use with Vent Weight H10-20 and Handle Bar A02-12 / A12-12 / B12-12 or their respective subassembly
	Vent Tube with Nut & Washer	H80-18	2005	8 L Jumbo & 10L	Use with Vent Weight H10-20 and HandleBar D12-12 or its subassembly D 20-12.
	Lid Handle with Rivets	B19-13	1975, 1995, 2005	1.5 L to 8 L	-
	Lid Handle with Rivets	D19-13	1975, 1995, 2005	8 L Jumbo & 10L	-
	Locking Loop	B10-16	1975, 1995, 2005	1.5 L to 8 L	-
	Locking Loop	D10-16	1975, 1995, 2005	8 L Jumbo & 10L	-
	Lid Handle Bar	A00-12	1995	1.5 L	Use with Vent Weight A00-20 and Vent Tube A00-18 or Vent Weight B20-20 and Vent Tube B20-18.

	Lid Handle Bar	A10-12	1975	2 L to 3 L & 4	Use with Vent Weight B10-20 and Vent Tube B10-18 or Vent Weight B20-20 and Vent Tube B10-18.
	Lid Handle Bar	A11-12	1995	2 L to 3 L & 4	Use with Vent Weight B10-20 and Vent Tube B11-18 or Vent Weight B20-20 and Vent Tube B20-18.
	Lid Handle Bar	B10-12	1975	4 L to 8 L	Use with Vent Weight B10-20 and Vent Tube B10-18 or Vent Weight B20-20 and Vent Tube B10-18.
	Lid Handle Bar	B11-12	1995	4 L to 8 L	Use with Vent Weight B10-20 and Vent Tube B11-18 or Vent Weight B20-20 and Vent Tube B20-18.
	Lid Handle Bar	D10-12	1975, 1995	8 L Jumbo & 10L	Use with Vent Weight B10-20 and Vent Tube D10-18 or Vent Weight B20-20 and Vent Tube D20-18.
	Lid Handle Bar	A02-12	2005	1.5 L	Use with Vent Weight H10-20 and Vent Tube H10-18.
	Lid Handle Bar	A12-12	2005	2 L to 3 L	Use with Vent Weight H10-20 and Vent Tube H10-18.
	Lid Handle Bar	B12-12	2005	3.5 L to 8 L	Use with Vent Weight H10-20 and Vent Tube H10-18.
	Lid Handle Bar	D12-12	2005	8 L Jumbo & 10L	Use with Vent Weight H10-20 and Vent Tube H80-18.
	Lid Handle Bar Assembly	A05-12	1995	1.5 L	Use with Vent Weight A00-20 and Vent Tube A00-18 or Vent Weight B20-20 and Vent Tube B20-18.
	Lid Handle Bar Assembly	A15-12	1975	2 L to 3 L & 4	Use with Vent Weight B10-20 and Vent Tube B10-18 or Vent Weight B20-20 and Vent Tube B10-18.
	Lid Handle Bar Assembly	A19-12	1995	2 L to 3 L & 4	Use with Vent Weight B10-20 and Vent Tube B11-18 or Vent Weight B20-20 and Vent Tube B20-18.
	Lid Handle Bar Assembly	B15-12	1975	4 L to 8 L	Use with Vent Weight B10-20 and Vent Tube B10-18 or Vent Weight B20-20 and Vent Tube B10-18.
	Lid Handle Bar Assembly	B19-12	1995	4 L to 8 L	Use with Vent Weight B10-20 and Vent Tube B11-18 or Vent Weight B20-20 and Vent Tube B20-18.
	Lid Handle Bar Assembly	D15-12	1975, 1995	8 L Jumbo & 10L	Use with Vent Weight B10-20 and Vent Tube D10-18 or Vent Weight B20-20 and Vent Tube D20-18.
	Lid Handle Bar Assembly	A06-12	2005	1.5 L	Use with Vent Weight H10-20 and Vent Tube H10-18.
	Lid Handle Bar Assembly	A20-12	2005	2 L to 3 L	Use with Vent Weight H10-20 and Vent Tube H10-18.

	Lid Handle Bar Assembly	B20-12	2005	3.5 L to 8 L	Use with Vent Weight H10-20 and Vent Tube H10-18.
	Lid Handle Bar Assembly	D20-12	2005	8 L Jumbo & 10L	Use with Vent Weight H10-20 and Vent Tube H80-18.
	Gasket	A00-09	1995, 2005	1.5 L	Use with Lid A00-07.
	Gasket	A10-09	1975, 1995, 2005	2 L to 3 L & 4L	Use with Lid A10-07.
	Gasket	B10-09	1975, 1995, 2005	3.5 L to 8 L	Use with Lid B10-07.
	Gasket	D10-09	1975, 1995, 2005	8 L Jumbo & 10L	Use with Lid D10-07.
	Cover Head	B10-19	1975, 1995, 2005	1.5 L to 8 L	-
	Cover Head	D10-19	1975, 1995, 2005	8 L Jumbo & 10L	-
	Safety Valve	B10-10	1975, 1995, 2005	1.5 L to 12 L	-
	Lid	A00-07	1995, 2005	1.5 L	-
	Lid	A10-07	1975, 1995, 2005	2 L to 3 L & 4L	-
	Lid	B10-07	1975, 1995, 2005	3.5 L to 8 L	-
	Lid	D10-07	1975, 1995, 2005	8 L Jumbo & 10L	-
	Complete Lid assembly without Vent Weight	A02-07	1995	1.5 L	Use with Vent weight A00-20
	Complete Lid assembly without Vent Weight	A05-07	1995	1.5 L	Use with Vent weight B20-20
	Complete Lid assembly without Vent Weight	A06-07	2005	1.5 L	Use with Vent weight H10-20
	Complete Lid assembly without Vent Weight	A15-07	1975, 1995	2 L to 3 L & 4L	Use with Vent weight B10-20
	Complete Lid assembly without Vent Weight	A19-07	1975, 1995	2 L to 3 L & 4L	Use with Vent weight B20-20

	Vent Weight				20
	Complete Lid assembly without Vent Weight	A20-07	2005	2 L to 3 L & 4L	Use with Vent weight H10-20
	Complete Lid assembly without Vent Weight	B15-07	1975, 1995	4 L to 8 L	Use with Vent weight B10-20
	Complete Lid assembly without Vent Weight	B19-07	1975, 1995	4 L to 8 L	Use with Vent weight B20-20
	Complete Lid assembly without Vent Weight	B20-07	2005	3.5 L to 8 L	Use with Vent weight H10-20
	Complete Lid assembly without Vent Weight	D15-07	1975, 1995	8 L Jumbo & 10L	Use with Vent weight B10-20
	Complete Lid assembly without Vent Weight	D19-07	1975, 1995	8 L Jumbo & 10L	Use with Vent weight B20-20
	Complete Lid assembly without Vent Weight	D20-07	2005	8 L Jumbo & 10L	Use with Vent weight H10-20
	Pivot	B10-04	1975	2 L to 12 L	Use with Body Handle B15-01.
	Main Handle Bracket with Rivets	B10-02	1975	2 L to 8 L	Use with Body Handle B15-01.
	Main Handle Bracket with Rivets	B11-02	1995, 2005	1.5 L to 8 L	Use with Body Handle B19-01.
	Main Handle Bracket with Rivets	D10-02	1975	10 L to 12 L	Use with Body Handle B15-01.
	Main Handle Bracket with Rivets	D11-02	1995, 2005	8 L Jumbo & 10L	Use with Body Handle B19-01
	Body Handle with 2 Pairs of Stud and Screw	B15-01	1975	2 L to 12 L	Use with Main Handle Brackets B10-02 / D10-02.
	Body Handle with 2 Pairs of Stud and Screw	B19-01	1995, 2005	1.5 L to 12 L	Use with Main Handle Brackets B11-02 / D11-02

	Subsidiary Body Handle with Screw	B15-05	1975	4 L to 12 L	Use with Subsidiary Handle Bracket B10-24 / D10-24 .
	New Subsidiary Body Handle with Screw	B19-05	1995, 2005	3.5 L to 12 L	Use with Subsidiary Handle Bracket B11-24 / D11-24.
	Subsidiary Handle Screw	B10-06	1975	4 L to 12 L	Use with Subsidiary Body Handle B10-05.
	Subsidiary Handle Screw	B11-06	1995, 2005	3.5 L to 12 L	Use with Subsidiary Body Handle B11-05.
	Subsidiary Handle Bracket with Rivets	B10-24	1975	4 L to 8 L	Use with Subsidiary Body Handle B15-05.
	New Subsidiary Handle Bracket with Rivets	B11-24	1995, 2005	3.5 L to 8 L	Use with New Subsidiary Body Handle B19-05 .
	Subsidiary Handle Bracket with Rivets	D10-24	1975	10 L to 12 L	Use with Subsidiary Body Handle B15-05.
	New Subsidiary Handle Bracket with Rivets	D11-24	1995, 2005	8 L Jumbo & 10L	Use with New Subsidiary Body Handle B19-05.
	Retrofit Subsidiary Handle Bracket	B12-24	1975	4 L to 12 L	Use to fit 1995 Version Subsidiary Body Handle B11-05 to 1975 Version Cookers.